

MAINTENANCE ITEM	MONTH	3	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120
	KMx1,000	5	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150	160	170	180	190	200
Engine Oil	Normal Usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
	Severe Usage	Replace every 5,000 km																				
Engine Oil Filter	Normal Usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
	Severe Usage	Replace every 5,000 km																				
Diesel Filter Element	Normal Usage		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
	Severe Usage	Replace every 5,000 km																				
Diesel Pre Filter Element	Normal Usage		I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R
	Severe Usage	Replace every 10,000 km																				
Air Filter	Normal Usage			R		R		R		R		R		R		R		R		R		R
	Severe Usage	Replace every 10,000 km																				
MT Transmission Oil	Normal Usage			R		R		R		R		R		R		R		R		R		R
	Severe Usage	Replace every 10,000 km																				
Rear Axle Oil	Normal Usage					R				R				R				R				R
	Severe Usage	Replace every 20,000 km																				
Radiator Coolant					R				R				R				R				R	
Power Steering Fluid					R				R				R				R				R	
Transmission Release Fork Shaft				L			L			L			L			L			L			L
Suspension & Ball Joint Lubrication		L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L
Engine drive belt			I		I		I		I		I		I		I		I		I		I	
Electrical and Equipment & lighting System	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Refrigerant Gas & Compressor Oil			I		R		I		R		I		R		I		R		I		R	
Battery Electrolyte Specific Weight or Voltage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Urea Tank Filter Element	Replace every 100,000 km																					
Oil Gas Separator	Replace every 50,000 km																					